

MEDIA

Sing-Along Cassette Player

Now it's easy to sing along with your favorite song!

Kids just love our sing-along cassette player and recorder. Microphone allows young vocalists to be amplified and sing along to their heart's content. For continuous play, a switch with latch/timer feature is required. Can be used with or without a switch.

Size: 10" x 1½" x 9¾". Requires 4 C Batteries #5



iScanMP3

Single switch scanning control for your iPod®! Now you can play your iPod® with a single switch. Simply plug your capability switch into the iScanMP3. Activate your switch and scan through all the iPod® functions: play, pause, forward and back through your play list, and volume up and down. The scanning speed is adjustable. Works only with the Apple iPod®, iPod® Photo and iPod® Mini! Ipod not included.

Size: 3 5/8"L x 1¾"W x ½"H. Requires Capability Switch.



Sing-Along CD Player

#593

With microphone!

This fully functional CD player has been adapted to start and pause with each switch activation when using your capability switch. It has a 2 digit LED track display.

Size: 10"L x 3½"W x 9"H. Requires Capability Switch and 6 C Batteries.

#6



Dora CD Player

Stereo headphones!

Kids will love this adorable CD player. This high quality unit has been adapted to turn on and off using your capability switch.

Size: 5½"L X 1" W. Requires Capability Switch and 2 AA Batteries.

#345



Travel Cassette Player

Plays real cassettes!

This compact and functional cassette player allows children to listen to their favorite cassette by pressing their capability switch. It has two play modes so children can listen with adjustable headphones or through the built in speaker. Has play, stop, and fast forward buttons, volume control and adjustable strap for carrying. Great for increasing fine motor and auditory skills. For continuous play, a switch with latch/timer feature is required.



CD Walkman

Size: 6"L x 5½"W. Requires Capability Switch and 2 AA Batteries.

#7

Finally, a switch-adapted CD player! A portable CD player that can be easily operated by your switch! The CD function starts and pauses with each switch activation. AM/FM radio function is not switch-adapted. (Not available for momentary switch operations).



AM/FM Headphones with Tilt Switch

Size: 6" x 5" x 1". Requires Capability Switch and 2 AA Batteries

#342

Lightweight and adjustable headband! Headphones can be used for posture training. Plug velcro mounted posture switch into the jack and set it to the desired angle. This encourages the user to keep their head in position. You can also play the radio by sustaining activation of your capability switch.



Boom Box

Size: 6" x 7" x 2¼". Requires Capability Switch and 2 AA Batteries

#344

High quality, full size! Our AM/FM stereo cassette player has been specially adapted for use with any of our capability switches. The music plays only when your switch is activated. Also comes in a lighted version with colorful lights that flash in response to the music.



Size: 18¼" x 5½" x 5½". Requires Capability Switch and 4 D Batteries. Please Note: Due to manufacturer's availability brand and style may vary. AC line cord has been removed for safety reasons.

Small Boom Box

#391 Boom Box

#392 Lightened Boom Box

BIG Sound!

This portable AM/FM Boom Box has great sound. Just add a capability switch and enjoy the music of your choice.

Size: 4" x 3¼" x ½". Requires Capability Switch and 3 AA Batteries

Please Note: Due to manufacturer's availability brand, style and color may vary.

#3975



CD Boom Box

Switch-adapted with CD player!

This switch-adapted boom box has a CD player, AM/FM radio and a cassette player all in one unit! Simply plug your capability switch into the radio/cassette jack to play music, or plug your switch into the CD jack to activate your favorite CD. The radio and cassette functions require continuous switch activation to play. The CD function starts and pauses with each switch activation. The CD function will not work with a latch/timer.

Size: 14"L x 8"W x 7"H. Requires Capability Switch and 8 D Batteries.

Please Note: Style and brand may vary. AC line cord has been removed for safety reasons.



#393

Sony CD Walkman

Includes ear-clip headphones! Our adapted CD player is great for those who want to listen to music but can not access the buttons. Activate your capability switch to listen to the CD and press it again to stop.

Size: 5½" Diameter. Requires Capability Switch and 2 AA Batteries.



#331

Sony CD Boom Box

Switch adapted! We've adapted this compact and portable boom box making it accessible to everyone. It features a CD player, cassette player and recorder, AM-FM radio with 30 station pre-sets, and a Mega bass sound system. It also has a large LCD display. Activate your switch once to turn ON the Radio, Tape or CD player, activate it a second time to turn the selected function OFF. This Boom Box will run on batteries or AC power.

Size: 14"L x 5½"D x 9½"H. Requires Capability Switch and 6 C Batteries. Also comes with A/C Wall Outlet



#397

Tape Recorder

Switch-activated!
Ideal for voice or music, this adapted player/recorder is designed to be used with or without an external switch. The Tape Recorder encourages children to activate their switch to hear their favorite songs. Please note: AC line cord has been removed for safety reasons.

Size: 5" x 8½" x 3½". Requires Capability Switch and 4 AA Batteries. Please note: AC line cord has been removed for safety reasons.



#390

Tape Recorder with Latch Timer

In the switch mode, the user holds the switch to play. In the latch mode, the user touches the switch and the tape recorder remains activated until the switch is touched again to turn it off. This mode is useful if a child cannot sustain a hand on the switch. In the timer mode, the user sets the timer to play for a desired length of time (1-120 seconds). This mode can be used to motivate a child to want to hit the switch again to hear more. Please note: AC line cord has been removed for safety reasons.

Switch shown not included.

#390-X

Am/FM Radio with Tilt Headset

Assists with posture-correcting biofeedback! These innovative headphones are perfect for those who would benefit from posture-correcting biofeedback. Each set of headphones comes equipped with a special adjustable tilt switch. When the head is brought into proper position (as determined by the placement of the switch), the radio instantly turns on.

Size: 4½"L x 2½"W. Requires 2 AA Batteries.



